

Contents

Chapter 1: Preface	- 2 -
Chapter 2: Product introduction	- 3 -
Chapter 3: Specifications	- 4 -
Chapter 4: Instrument installation	- 5 -
Chapter 5: Wiring	- 7 -
Chapter 6: Relay contact protection	- 8 -
Chapter 7: Display	- 9 -
Chapter 8: Key function	- 10 -
Chapter 9: HOLD Type	- 10 -
Chapter 10: Setting	- 11 -
Chapter 11: Default	- 23 -
Chapter 12: Password	- 24 -
Chapter 13: Error code	- 25 -
Chapter 14: RS485 command	- 25 -
Chapter 15: Warranty	- 28 -

Chapter 1: Preface

Thank you for purchasing conductivity controller. Please read this manual carefully before operating and using it correctly to avoid unnecessary losses caused by false operation.

Note

- Modification of this manual's contents will not be notified as a result of some factors, such as function upgrading.
- We try our best to guarantee that the manual content is accurate, if you find something wrong or incorrect, please contact us.
- This product is forbidden to use in explosion-proof occasions.

Safety Precautions

- Read the following instructions before using the instrument.
- After unpacking the instrument, please confirm the package contents before starting the operation.
- The instrument must be operated by trained professional and technical personnel.
- Please read the manual carefully to avoid incorrect wiring connection that can cause equipment damage and safe problem.
- Confirm if the supply voltage is in consistent with the rated voltage before operation.
- To prevent from electric shock, operation mistake, a good grounding protection must be made.
- Cut off electric powers before making any checks to avoid electric shock.
- Check the condition of the terminal screws regularly. If it is loose, please tighten it before use.
- It is not allowed to disassemble, process, modify or repair the product without authorization, otherwise it may cause abnormal operation, electric shock or fire accident.
- Don't use the instrument if it is found damaged or deformed at opening of package.
- Prevent dust, wire end, iron fines or other objects from entering the instrument during installation, otherwise, it will cause abnormal movement or failure.
- After wiring carefully check all are correct then can power on and make sure the other equipment are correct.
- During operation, to modify configuration, signal output, startup, stop, operation safety shall be fully considered. Operation mistakes may lead to failure and even destruction of the instrument and controlled equipment.
- Each part of the instrument has a certain lifetime, which must be maintained and repaired on a regular basis for long-time use.
- Please avoid installing in a high humidity, high temperature, corrosive and in a direct sunlight environment.
- Please separate the power line of instrument from other machines that produces high noise in the power line.

- When not using this product, be sure to turn off the power switch.
- This manual only describes the functions of the product. The company does not guarantee that the product will be suitable for a particular use by the user.

Chapter 2: Product introduction



- The product package contains 1 controller, 1 manual.
- Controllers are used in industrial measuring of the temperature, conductivity, resistivity, salinity and total dissolved solids, such as waste water treatment, environmental monitoring, pure water, sea farming, food production process, etc.
- The controller can be panel, wall or pipe mounted.
- The controller provides two current outputs. The maximum load is 500Ω.
- The controller provides 3 relays. It can pass through a maximum of 5A/250VAC or 5A/30VDC.

Chapter 3: Specifications



Functions	EC	Resistivity	Salinity	TDS
Measuring range	0.00uS-2000 mS	0.00-20.00 MΩ-CM	0.00-78.00 g/Kg	0-133000 ppm
Resolution	0.01/0.1/1	0.01	0.01	1
Accuracy	±1.5%F.S.	±1.5%F.S.	±1.5%F.S.	±1.5%F.S.
Temp. compensation	Pt 1000/NTC30K			
Temp. range	-10.0 to +130.0°C			
Temp. compensation range	-10.0 to +130.0°C			
Temp. resolution	0.1°C			
Temp. accuracy	±0.2°C			
Cell constant	0.001 to 20.000			
Ambient temperature range	0 to +70°C			
Storage temp.	-20 to +70°C			
Display	Back light, dot matrix			
EC current output1	Isolated, 4 to 20mA output , max. load 500Ω			
Temp. current output 2	Isolated, 4 to 20mA output , max. load 500Ω			
Current output accuracy	±0.05 mA			
RS485	Mod bus RTU protocol			
Baud rate	9600/19200/38400			
Maximum relay contacts capacity	5A/250VAC,5A/30VDC			
Cleaning setting	ON: 1 to 1000 seconds, OFF: 0.1 to 1000.0 hours			
One multi function relay	Rinse / Interval alarm / Error alarm			
Relay delay	0-120 seconds			
Data logging capacity	500,000			
Language selection	English / Traditional Chinese/ Simplified Chinese			
Waterproof grade	IP65			
Power supply	From 90 to 260 VAC, power consumption < 5 watts			
Installation	Panel / Wall installation			

Chapter 4: Instrument installation


- ◆ The instrument can be panel, wall or pipe mounted installation.
- ◆ Panel Installation: Make a 138x138mm square cutout and insert the instrument. Screw in the fixed block with the screws and fixed bar.

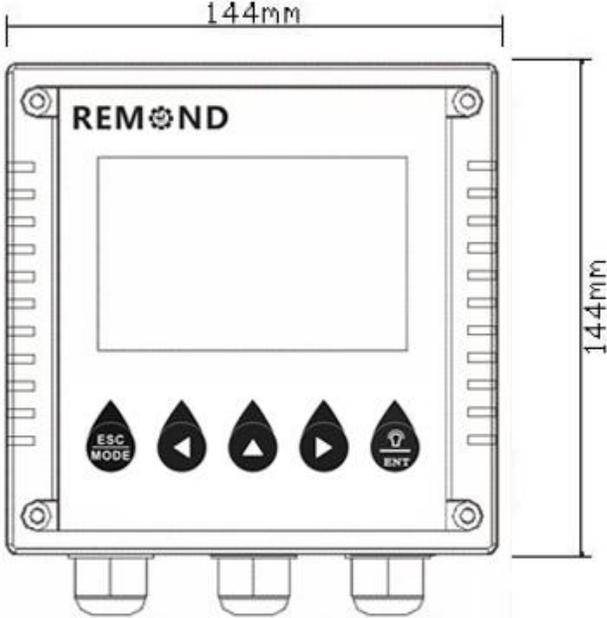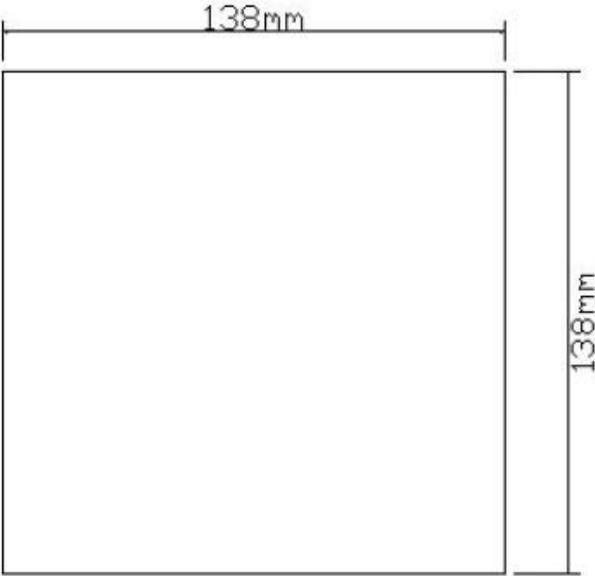

144 series cutout size

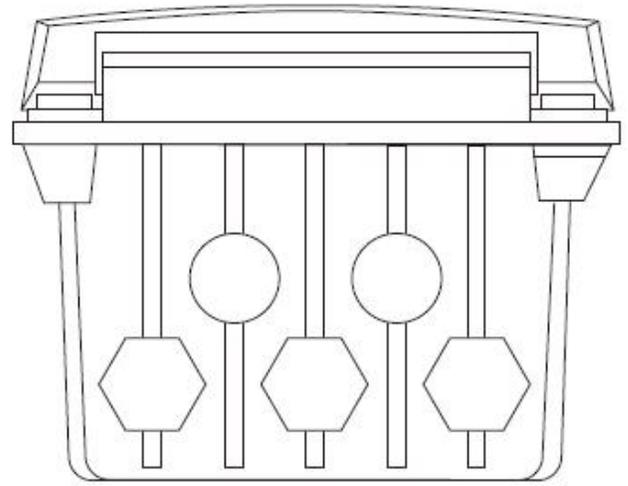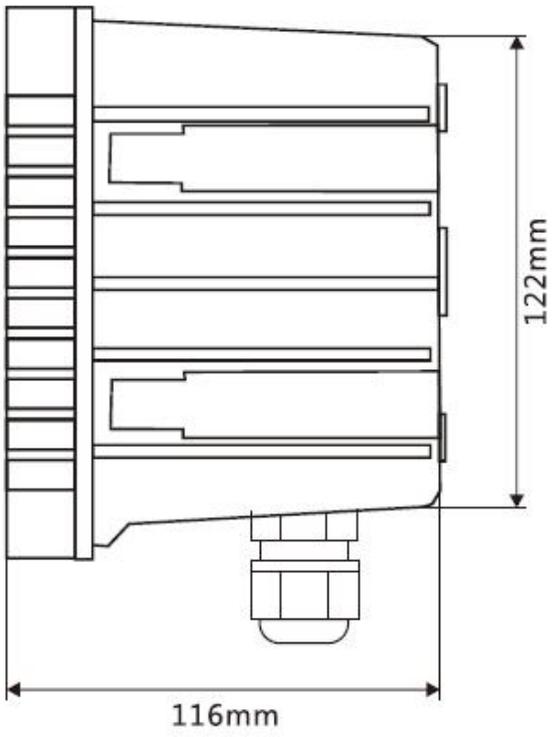


144 series dimension

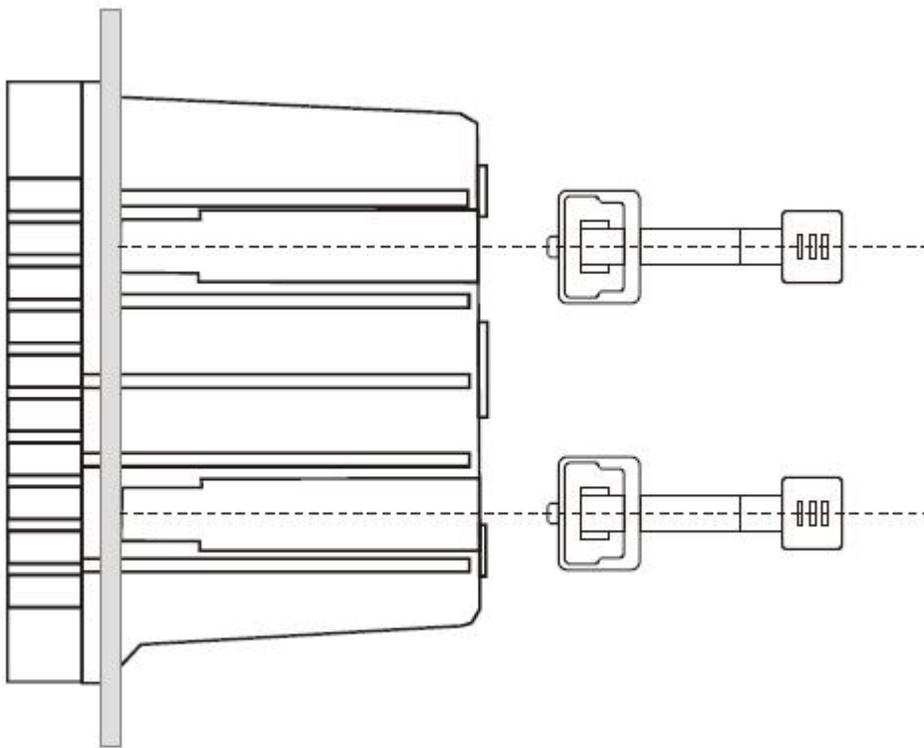



144 series installation figure

Chapter 5: Wiring

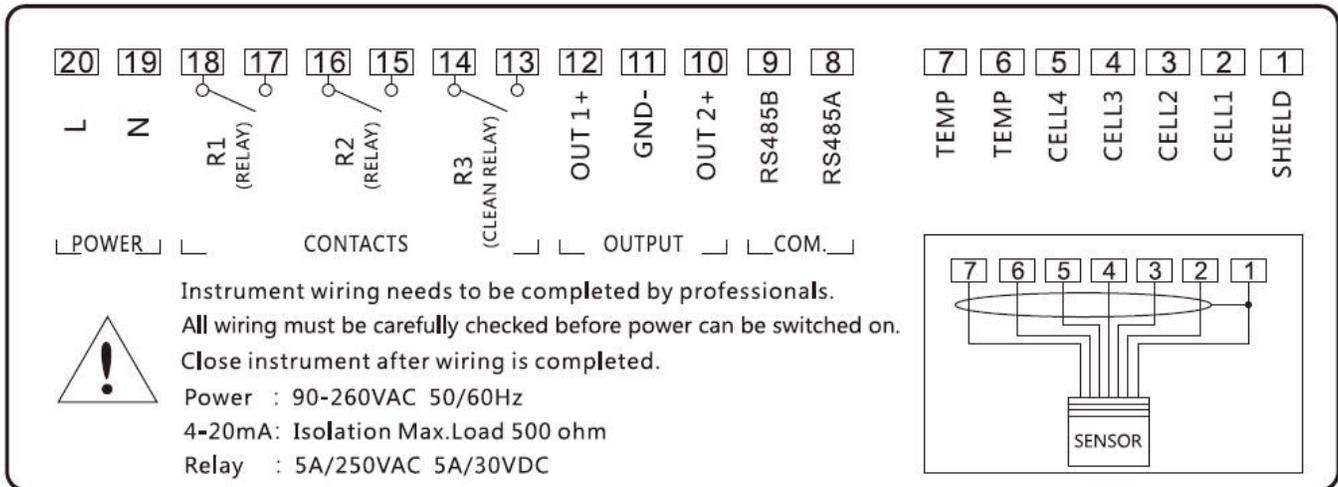


Notice: If the power supply is DC24V, terminal 20 : DC24V+ (L+); terminal 19 : DC24V- (L-)

Electrode connection figure

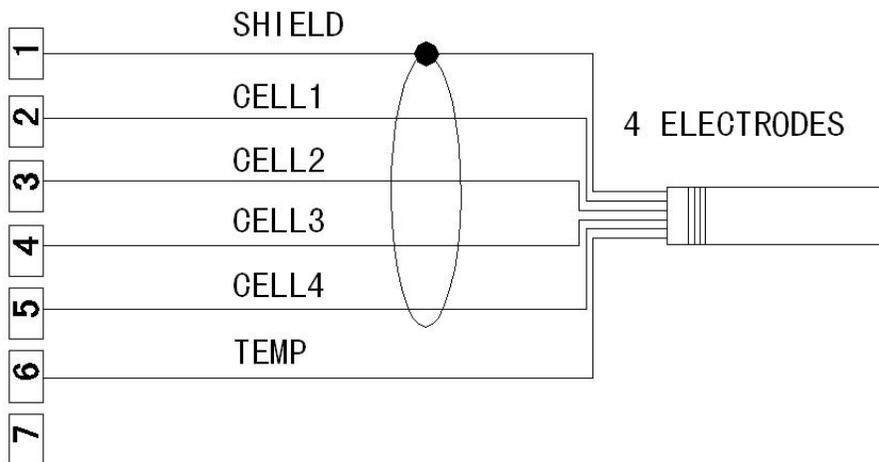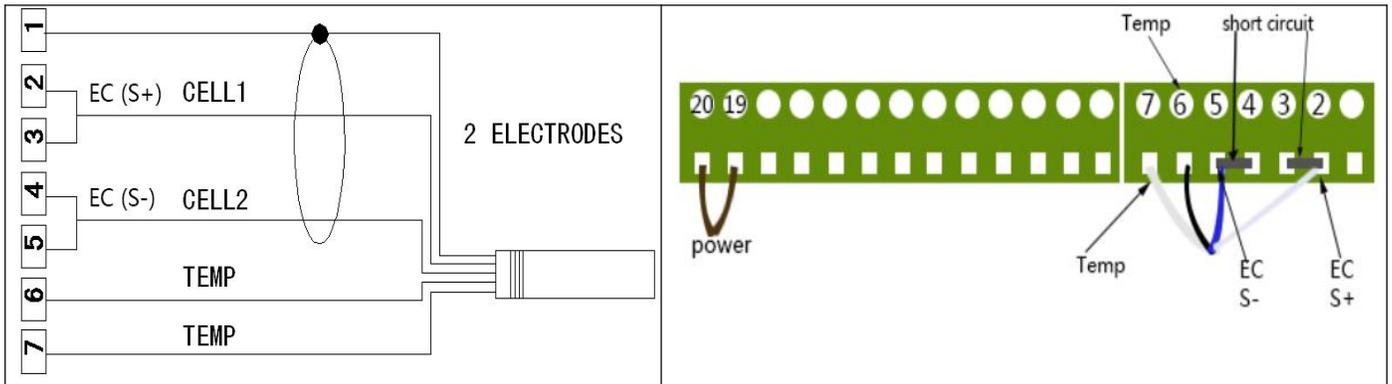


Chapter 6: Relay contact protection

Electrical spark at the relay contact may affect the life of the relay, especially in an inductive and capacitive load. In order to inhibit the spark and arc, user should use an RC circuit to extend the life of the relay.

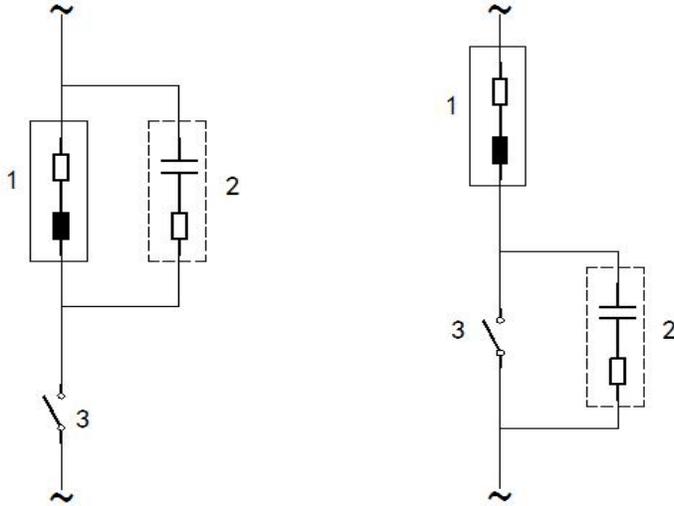


AC protection, use for inductive load

1. load
2. RC eliminate spark, using in 220VAC, $R=100\ \text{ohm}$, $C=0.1\ \mu\text{F}$ 630V
3. Relay contact

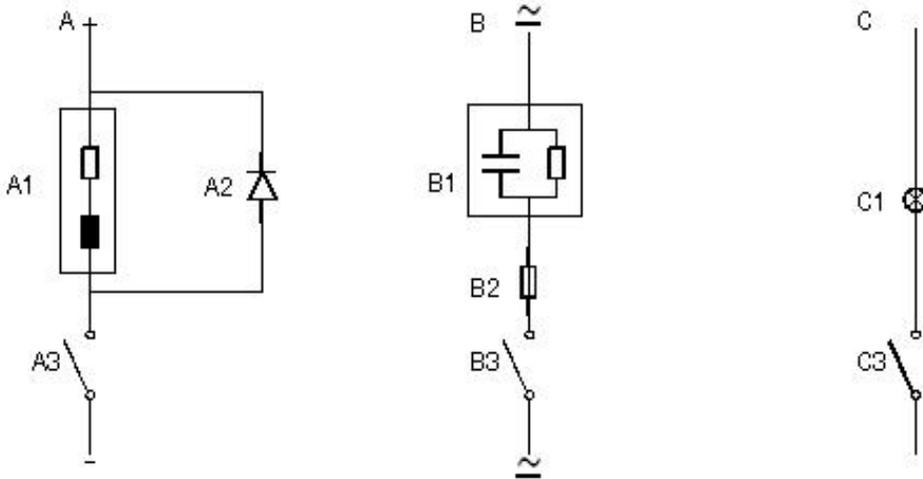

1. DC protection : A1: inductive load; A2: 1N4007; A3: relay contact
2. AC/DC protection: B1: capacitive load; B2: 0.8 Ohm/1W (DC24V) ; B3: relay contact
3. Resistive load: C1:lamp bulb; C3:relay contact

Chapter 7: Display

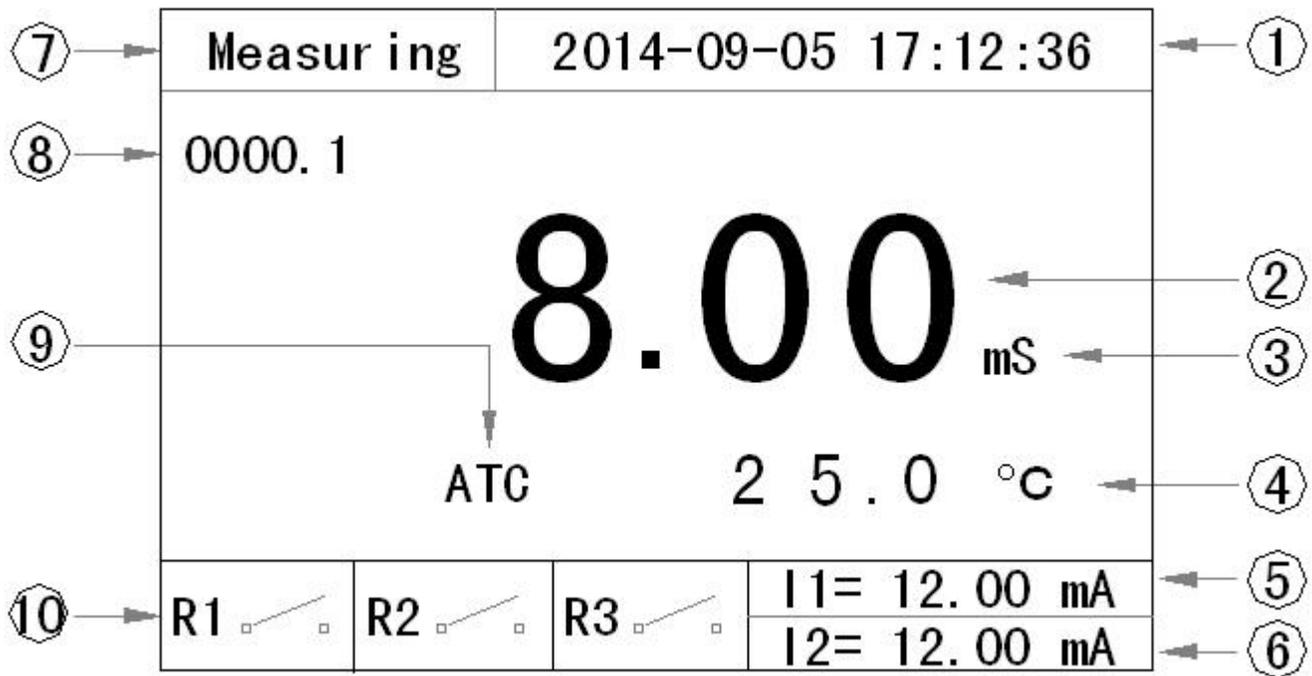

1. Date and time
2. Main display
3. Unit
4. Temperature and unit
5. First current output
6. Second current output
7. Measurement status and Error indicator, there is no display if meter is in keeping mode
8. Count down timer: Period time/ Clean time, it also displays the “delay” when relay3 has a delay enabled.
9. Temp. compensation: Auto(ATC) or Manual(MTC)
10. Relay indicator

Note:

If the EC readings are under or over the range, it will display 99.99/ 999.9/ 9999

If the temperature readings are under or over the range, it will display -99.9/ 999.9.

Chapter 8: Key function



Key name	Meas. status	Setting status	Cal. status	Record status
MODE	Enter password	Exit	Exit	Exit
SHIFT	None	Move digit	Move digit	Move digit
UP	Enter record	Inc	Inc	Inc
DOWN	None	Dec	Dec	Dec
ENTER	ON/OFF back light	Enter	Enter	Enter

Chapter 9: HOLD Type

HOLD type is a safe mode. It is for Calibration, Setting, Record and Clean. In this mode all the relays are open(inactive), current output follows the setting by user(last current or fixed current).

The instrument will enter HOLD type when user presses into Calibration, Setting, Record or the instrument works in clean mode.

It will in HOLD type around 10 seconds when it goes back to measurement mode form the above mentioned 4 modes then left HOLD type.

The instrument will go into the HOLD type when turn on the power.
Current output in HOLD type:

User has two choices: fixed current output or last current output.

- ◆ Fixed current: User can set the output current from 4.00 to 20.00mA when instrument goes into HOLD type.
- ◆ Last current: User can set the output current keep at the last current when instrument goes into HOLD type.
- ◆ Relays in HOLD type: All relays are opened.(inactive)

Chapter 10: Setting

PASSWORD
2 0 0 8

Press MODE key to enter the password menu , then press UP/DOWN/SHIFT key to input password 2008 , press ENTER will enter to setting mode or press MODE key to exit. If no key is be pressed and over 10 minutes then it will go back to measurement mode.

10.1 Home screen

Page1

CONF IGURATION
<ul style="list-style-type: none">■ Current1 Settings<input type="checkbox"/> Current2 Settings<input type="checkbox"/> Relay1 Settings<input type="checkbox"/> Relay2 Settings<input type="checkbox"/> Relay3 Settings<input type="checkbox"/> Measurement Settings<input type="checkbox"/> Temperature Settings<input type="checkbox"/> RS485 Settings

Page2

CONF IGURATION
<ul style="list-style-type: none">■ Date Settings<input type="checkbox"/> Data Log Settings<input type="checkbox"/> Output Test<input type="checkbox"/> Language Settings<input type="checkbox"/> Reset Parameters

Press UP/DOWN key to choose functions, press ENTER key enter the function.

Notice:

- ◆ When the input data is not in correct range then it will display ERROR on the top of LCD.
- ◆ After input data user needs to press ENTER to save the data.
- ◆ Press MODE to exit.
- ◆ No key is be pressed in 10 minutes then it will go back to measurement mode.

10.2 Current 1 settings

CURRENT 1 SETTINGS	
4.00 mA	= 0 0 0 0 uS
20.00 mA	= 1 0 0 0 uS
Offset	= + 0 . 0 0 mA
Filter Time	= 0 0 0 SEC
HOLD Type	= <input type="checkbox"/> Fixed
	0 4 . 0 0 mA
	<input type="checkbox"/> Last

- ◆ Set the corresponding 4.00mA to EC/ Resistivity/ Salinity/ TDS.
- ◆ Set the corresponding 20.00mA to EC/ Resistivity/ Salinity/ TDS, the difference between 4.00mA and 20.00 mA at least for EC is 1.00/ 10.0/ 100(according to the range), for Resistivity is 1.00, for Salinity is 1.00, for TDS is 100.
- ◆ Set the offset current of EC/ Resistivity/ Salinity/ TDS, the range is ± 1.00 mA.
- ◆ The filter time range is 0-120 seconds, the low pass filter of software will active when the current from one point to another point if user sets the filter time.
- ◆ Set the current 1 output mode(fixed / last) when instrument enter into keeping mode.

Notice:

- ◆ The maximum current is 22.00mA, the minimum current is 3.5mA.

10.3 Current 2 settings

CURRENT 2 SETTINGS	
4.00 mA	= + 0 0 0 . 0 °C
20.00 mA	= + 1 0 0 . 0 °C
Offset	= + 0 . 0 0 mA
Filter Time	= 0 0 0 SEC
HOLD Type	= <input type="checkbox"/> Fixed
	0 4 . 0 0 mA
	<input type="checkbox"/> Last

- ◆ Set the corresponding 4.00mA to temperature.
- ◆ Set the corresponding 20.00mA to temperature, the difference at least between 4.00mA and 20.00 mA is 10.0°C.
- ◆ Set the offset current of temperature, the range is ±1.00mA.
- ◆ The filter time range is 0-120 seconds, the low pass filter of software will active when the current from one point to another point if user sets the filter time.
- ◆ Set the current 2 output mode(fixed / last) when instrument enter into keeping mode.

10.4 Relay 1 settings

RELAY 1 SETTINGS	
ON/OFF	= <input checked="" type="checkbox"/> ON <input type="checkbox"/> OFF
Close S. P.	= 1 0 0 0 uS
Open S. P.	= 0 4 0 0 uS
Delay Time	= 0 0 0 SEC

- ◆ Press UP/DOWN key to ON/ OFF (enable/ disable) relay1.
- ◆ Close set point: active point for EC/ Resistivity/ Salinity/ TDS.
- ◆ Open set point: inactive point for EC/ Resistivity/ Salinity/ TDS.
- ◆ Delay time: the range is 0-120 seconds. Relay needs to delay first then active if the measuring data is reach to close set point.
- ◆ Ex: If user want to add the drug at EC 1000uS and release it at EC 400uS (without dosing), then the close S.P. set to 1000uS, the Open S.P. set to 400uS.

10.5 Relay 2 settings

RELAY 2 SETTINGS	
ON/OFF	= <input checked="" type="checkbox"/> ON <input type="checkbox"/> OFF
Close S. P.	= 0 4 0 0 μ S
Open S. P.	= 1 0 0 0 μ S
Delay Time	= 0 0 0 SEC

- ◆ Press UP/DOWN key to ON/OFF (enable/ disable) relay2.
- ◆ Close set point: active point for EC/ Resistivity/ Salinity/ TDS.
- ◆ Open set point: inactive point for EC/ Resistivity/ Salinity/ TDS.
- ◆ Delay time: the range is 0-120 seconds. Relay needs to delay first then active if the measuring data is reach to close set point.
- ◆ Ex: If user want to add the drug at EC 400 μ S and release it at EC 1000 μ S (without dosing), then the close S.P. set to 400 μ S, the Open S.P. set to 1000 μ S.

10.6 Relay 3 settings

RELAY 3 SETTINGS	
ON/OFF	= <input type="checkbox"/> ON <input checked="" type="checkbox"/> OFF
Period Time	= 0 0 0 1 . 0 HOUR
Clean Time	= 0 0 1 0 SEC
Delay Time	= 0 0 0 SEC
Function	= <input type="checkbox"/> Rinsing <input type="checkbox"/> Interval Alarm <input type="checkbox"/> Error Alarm

- ◆ Press UP/DOWN key to ON/OFF (enable/disable) relay3.
- ◆ Period time: The period for Rinsing or Interval alarm function.
- ◆ Clean time: When period is timeout then relay active (ON: 1 to 1000 seconds; OFF: 0.1 to 1000.0 hours).
- ◆ Delay time: The range is 0-120 seconds. Relay needs to delay first then active if the period is timeout.
- ◆ Function: Press UP/DOWN key to choose Rinsing / Interval alarm / Error alarm.

Notice:

- ◆ Rinsing: When period timeout then clean-relay will active, when clean time is timeout the repeat count for the period.
- ◆ Period alarm: When period timeout then clean-relay active until user resets the interval then the clean-relay inactive and repeat count for the period.
- ◆ Error alarm: The clean-relay active when there is a error produce. No delay time function in this mode.

10.7 Measurement settings

MEASUREMENT SETTINGS	
Mode	= <input checked="" type="checkbox"/> Conductivity <input type="checkbox"/> MΩ-CM <input type="checkbox"/> Salinity <input type="checkbox"/> TDS

- ◆ Choose the mode for measuring, press UP/DOWN key to choose, press ENTER to next.
- ◆ The Range selection for EC only.
- ◆ Offset , range for EC is ±1.00uS/ ±10.0uS/ ±100uS/ ±1.00mS/ ±10.0mS/ ±100mS, for Resistivity is ±1.00MΩ, for Salinity is ±1.00g/Kg, for TDS is ±100ppm.
- ◆ Filter: Range 0-10.
- ◆ Notice : If the reading is not stable then user can set the filter to average the readings.

10.7.1 Conductivity measurement settings

MEASUREMENT SETTINGS	
Range	= <input type="checkbox"/> 20.00 uS <input type="checkbox"/> 200.0 uS <input checked="" type="checkbox"/> 2000 uS <input type="checkbox"/> 20.00 mS <input type="checkbox"/> 200.0 mS <input type="checkbox"/> 2000 mS
Offset	= + 0 0 0 uS
Filter	= 0 1

10.7.2 Resistivity measurement settings

MEASUREMENT SETTINGS	
Comp. Mode	= <input checked="" type="checkbox"/> Linearity <input type="checkbox"/> Pure
Offset	= + 0 . 0 0 MΩ
Filter	= 0 1

10.7.3 Salinity measurement settings

MEASUREMENT SETTINGS	
Offset	= + 0 . 0 0 g/Kg
Filter	= 0 1

10.7.4 TDS measurement settings

MEASUREMENT SETTINGS	
TDS Coeff	= 0 . 5 0 0
Offset	= + 0 0 0 ppm
Filter	= 0 1

10.8 Temperature settings

TEMPERATURE SETTINGS	
Automatic	= <input checked="" type="checkbox"/> Auto <input type="checkbox"/> Manual
Probe	= <input type="checkbox"/> Pt 1000 <input type="checkbox"/> NTC 30K
Offset	= + 0 . 0 °C
Manual Meas.	= + 0 2 5 . 0 °C
Manual Cal.	= 2 5 . 0 °C

TEMPERATURE SETTINGS	
Display	= <input checked="" type="checkbox"/> YES <input type="checkbox"/> NO

- ◆ Temperature compensation setting, press UP/ DOWN key to choose.
- ◆ Temperature probe, press UP/DOWN key to choose.
- ◆ Temperature offset, the range is $\pm 5.00^\circ\text{C}$ (only for Automatic).
- ◆ Temperature for measuring when user set the temperature to manual.
- ◆ Temperature for calibration mode when user sets the temperature to manual.
- ◆ Temperature display: display the temperature on measurement mode or not.

Notice:

- ◆ When user chooses AUTO and doesn't connect temperature probe then the display will not correct.
- ◆ When select the probe needs to make sure the probe type is correct.
- ◆ Manual measurement: the instrument will use this temperature for compensation in measurement mode when user chooses Manual.
- ◆ Manual calibration: the instrument will use this temperature for compensation in calibration mode when user chooses Manual.

10.9 RS485 settings

RS485 SETTINGS	
ID Address	= 0 0 1
Baud Rate	= <input type="checkbox"/> 9600
	= <input type="checkbox"/> 19200
	= <input type="checkbox"/> 38400

- ◆ ID address:1-255.
- ◆ Baud rate ,press UP/DOWN key to choose.

10.10 Date settings

DATE SETTINGS	
Year	= 2 0 1 5
Month	= 0 8
Day	= 1 5
Hour	= 1 3
Minute	= 3 6
Second	= 0 4

Press UP/DOWN key to set the date. When power off the date will be kept for around 2 days.

10.11 Data log settings

DATE LOG SETTINGS	
ON/OFF	= <input checked="" type="checkbox"/> ON <input type="checkbox"/> OFF
Display Type	= <input type="checkbox"/> Record <input type="checkbox"/> XY Chart
Reset Record	= <input type="checkbox"/> Yes <input type="checkbox"/> No
Save Period	= 0 6 0 SEC

- ◆ Press UP/DOWN key to ON/OFF (enable/disable) this function.
- ◆ Display type, press UP/DOWN key to choose.
- ◆ Reset all the records, press UP/DOWN key to choose.
- ◆ Save period from 5 to 120 seconds.

Notice:

- ◆ When user chooses ON, then it will save measuring data follow the save period time.
- ◆ Display type: Record, display the detail of record(5 records in one page), XY chart, display a chart.(150 records in one page)
- ◆ When reset the records, it will spend around 10 seconds.

10.12 Output test

OUTPUT TEST	
Current1	= 0 4 . 0 0 mA
Current2	= 0 4 . 0 0 mA
Relay1	= <input type="checkbox"/> CLOSE <input type="checkbox"/> OPEN
Relay2	= <input type="checkbox"/> CLOSE <input type="checkbox"/> OPEN
Relay3	= <input type="checkbox"/> CLOSE <input type="checkbox"/> OPEN

- ◆ Current 1 output: 4.00-20.00mA, press UP/DOWN to set.
- ◆ Current 2 output: 4.00-20.00mA, press UP/DOWN to set.
- ◆ Relay 1 output, press UP/DOWN to choose.
- ◆ Relay 2 output, press UP/DOWN to choose.
- ◆ Relay 3 output, press UP/DOWN to choose.
- ◆ Notice: This function for testing the output only.

10.13 Language settings

LANGUAGE SETSINGS	
Language	= <input checked="" type="checkbox"/> English <input type="checkbox"/> 繁體中文 <input type="checkbox"/> 简体中文

Press UP/DOWN key to choose the language.
English, Traditional Chinese, Simplified Chinese.

10.14 Reset parameters

RESET PARAMETERS	
Reset Type	= <input checked="" type="checkbox"/> Current <input type="checkbox"/> Relay1 <input type="checkbox"/> Relay2 <input type="checkbox"/> Relay3 <input type="checkbox"/> All

- ◆ Press UP/DOWN key to choose the reset.
- ◆ Notice: The reset will not affect the calibrated parameters.


10.15 Record query

INPUT RECORD START NUMBER
0 1 0 3 0 0

- ◆ Press UP key at the measurement mode to enter record query mode.
- ◆ Press UP/DOWN and SHIFT key to input record number then press ENTER key enter or press MODE key exit.

RECORD 020300		
15-08-14	0200	uS
21:20:49	025.0	°C
15-08-14	0201	uS
21:20:59	025.0	°C
15-08-14	0201	uS
21:21:09	025.0	°C
15-08-14	0201	uS
21:21:19	025.0	°C
15-08-14	0201	uS
21:21:29	025.0	°C

Display EC record at record, 5 records each time

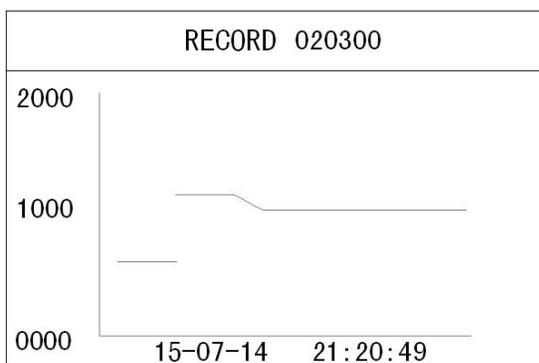

Display EC record at XY chart, 150 records each time

10.16 EC Calibration

PASSWORD
1 0 0 8

Press MODE key to enter the password menu, then press UP/DOWN/SHIFT key to input password 1008 , press ENTER will enter to calibration mode or press MODE key to exit. If no key is be pressed and over 10 minutes then it will go back to measurement mode.

10.17 Home screen

CALIBRATION
<input checked="" type="checkbox"/> Parameters Setting <input type="checkbox"/> Calibration <input type="checkbox"/> Reset Parameters

Press UP/DOWN key to select the functions and then press ENTER key to enter.

- ◆ parameters setting: Input the parameters.
- ◆ Calibration: Calibrate the EC.
- ◆ Reset parameters: Reset all of the calibrated parameters to default.

Notice:

If the cell constant is over than $\pm 30\%$, user should replace a new electrode.

10.18 Parameters Setting

PARAMETERS SETTING	
Temp. Coef.	= 0 2.0 0 %
Ref. Temp.	= 2 5.0 °C

- ◆ Temperature Coefficient of solution: the range is form 0.01 to 40.00%.
- ◆ Reference Temperature: the range is from 15.0 to 35.0 °C.

Notice:

In general, the conductivity is compensated back to 25.0°C, if the user wants to compensate back to other temperature, the reference temperature can be changed.

10.19 Calibration

CALIBRATION	
Last Cell	= 0 1 . 0 0 0 0
EC Reading	= 1 0 4 3 μ S
Temperature	= + 0 2 5 . 0 $^{\circ}$ C
Input Cell	= 0 1 . 2 0 0 0
Input Cell Constant	

- ◆ Put the electrode to the standard solution.
- ◆ It will display the EC reading.
- ◆ When the EC reading is stable then press UP/DOWN key to modify the cell constant to make the EC reading correspond to the standard solution.
- ◆ If the EC Reading is over the EC range or the temperature is over 0.0-60.0 $^{\circ}$ C then it will display error message on the button of LCD.

10.20 Reset parameters

RESET PARAMETERS
RESET

This will reset all of the calibrated parameters to default.

Chapter 11: Default

EC 20.00mA corresponding	1000	uS	range: 100 - 2000
EC 4.00mA corresponding	0	uS	range: 0 - 1900 difference : 100
RES 20.00mA corresponding	10.00	MΩ	range: 1.00 - 20.00
RES 4.00mA corresponding	0.00	MΩ	range: 0.00 - 19.00 difference : 1.00
SAL 20.00mA corresponding	10.00	g/Kg	range: 1.00 - 78.00
SAL 4.00mA corresponding	0.00	g/Kg	range: 0.00 - 77.00 difference : 1.00
TDS 20.00mA corresponding	1000	ppm	range: 100 - 133000
TDS 4.00mA corresponding	0	ppm	range: 0 - 132900 difference : 100
Temp. 20.00mA corresponding	100.0	°C	range: 0.0 - 130
Temp. 4.00mA corresponding	0.0	°C	range: -10.0 - 120.0 difference : 10.0
Current 1 output offset	0.00	mA	range: +/- 1.00
Current 2 output offset	0.00	mA	range: +/- 1.00
Current 1 filter	0	second	range: 0 - 120 second
Current 2 filter	0	second	range: 0 - 120 second
Current 1 fixed output	4.00	mA	range: 4.00 - 20.00
Current 2 fixed output	4.00	mA	range: 4.00 - 20.00
Current 1 HOLD type	last		range: fixed/last
Current 2 HOLD type	last		range: fixed/last
Relay 1 EC close S.P.	2000	uS	range: 0 - 2000
Relay 1 EC open S.P.	10	uS	range: 0 - 1900 difference : 1
Relay 1 RES close S.P.	10.00	MΩ	range: 0.00 - 20.00
Relay 1 RES open S.P.	0.1	MΩ	range: 0.00 - 19.00 difference : 0.01
Relay 1 SAL close S.P.	10.00	g/Kg	range: 0.00 - 78.00
Relay 1 SAL open S.P.	0.1	g/Kg	range: 0.00 - 77.00 difference : 0.01
Relay 1 TDS close S.P.	1000	ppm	range: 0 - 133000
Relay 1 TDS open S.P.	10	ppm	range: 0 - 132900 difference : 1
Relay 1 delay time	0	second	range: 0 - 120
Relay 2 EC close S.P.	1000	uS	range: 0 - 2000
Relay 2 EC open S.P.	10	uS	range: 0 - 1900 difference :1
Relay 2 RES close S.P.	10.00	MΩ	range: 0.00 - 20.00

Relay 2 RES open S.P.	0.1	MΩ	range: 0.00 - 19.00 difference :0.01
Relay 2 SAL close S.P.	10.00	g/Kg	range: 0.00 - 78.00
Relay 2 SAL open S.P.	0.1	g/Kg	range: 0.00 - 77.00 difference :0.01
Relay 2 TDS close S.P.	1000	ppm	range: 0 - 133000
Relay 2 TDS open S.P.	10	ppm	range: 0 - 132900 difference :1
Relay 2 delay time	0	second	range: 0 - 120
Relay 3 period time	1.0	hour	range: 0 - 1000.0
Relay 3 clean time	10	second	range: 0 - 1000
Relay 3 delay time	0		range: 0 - 120
Relay 3 function	Error alarm		range: Rinse/ Interval alarm/ Error alarm
Save period	60	second	range: 5 - 120
ID address	1		range: 1 - 255
Baud rate	9600		range: 9600,19200,38400
EC Offset	0	uS	range: +/-100
Resistivity Offset	0.00	MΩ	range: +/-1.00
Salinity Offset	0.00	g/Kg	range: +/-1.00
TDS Offset	0	ppm	range: +/-100
Mode	EC		range: EC/ RES/ SAL/ TDS
Measuring range	0-2000uS		range: 0-20.00uS/ 0-200.0uS 0-2000uS/ 0-20.00mS 0-200.0mS/ 0-2000mS
Temp. Offset	0.0	°C	range: +/- 5.0
Manual Temp.for measurement	25.0	°C	range: -10.0 - 130.0
Manual Temp. for calibration	25.0	°C	range: 0.0 - 60.0
Language	English		range: English Traditional Chinese Simplified Chinese
Filter	1		range: 0 - 10
Temp. compensation	ATC		range: ATC/MTC
Temp. probe	NTC30K		range: Pt1000, NTC30K
Record type	record		range: record/XY chart

Chapter 12: Password

Press MODE key

1008:Calibration mode

2008:Setting mode

If no key is be pressed and over 10 minutes then it will go back to measurement mode.

Chapter 13: Error code

Error 01	memory error
Error 02	reading is over maximum
Error 03	reading is under minimum
Error 04	temperature is over maximum
Error 05	temperature is under minimum
Error 06	current 1 output is over 20.5 mA, the maximum is 22.00mA
Error 07	current 1 output is under 3.8 mA, the minimum is 3.5mA
Error 08	current 2 output is over 20.5 mA, the maximum is 22.00mA
Error 09	current 2 output is under 3.8 mA, the minimum is 3.5mA
Error 10	record error
Error 11	ADC damage
Error 99	default parameters lost

Chapter 14: RS485 command

The instrument use the standard Modbus-RTU protocol, all of the data are word type(2 bytes), the range is -32767~32767 ,16 system.

PC command:

	ID address	command	Start address	Data number	CRC16
length	1 byte	1byte	2 byte	2 byte	2 byte
Ex.	0x01	0x03	0x0001	0x0001	0xD5CA

Instrument response:

	ID address	command	Data number	data	CRC16
length	1 byte	1 byte	1byte	N byte	2 byte
Ex.	0x01	0x03	0x02	0x02 0xBC	0xB895

If response is 01, the command is wrong.

If response is 02, the address is not correct.

If response is 03, data number is not correct.

Communication Baud rate: 9600 (fixed)

Data: 8

Parity: None

Stop bit: 1

Command 03: read the settings

Command 04: read the readings

04:definition

Address

(00) 0x00	EC/ RES/ SAL/ TDS measuring1	reading: floating unit is uS
(01) 0x01	EC/ RES/ SAL/ TDS measuring2	reading: floating
		measuring1 and measuring2 combine to a floating
(02) 0x02	EC/ RES/ SAL/ TDS current	reading:X 0.01
(03) 0x03	Temperature	reading:X 0.1
(04) 0x04	Temperature current	reading:X 0.01
(05) 0x05	Error code	reading:X 1
(06) 0x06	Measure mode	reading:0= EC, 1=RES, 2=SAL,3=TDS
(07) 0x07		
(08) 0x08		
(09) 0x09	Model type	fix to 3

03:definition

Address

(00) 0x00	EC 20.00mA corresponding (current 1)	reading:X0.01/0.1/1
(01) 0x01	EC 4.00mA corresponding(current 1)	reading:X0.01/0.1/1
(02) 0x02	RES 20.00mA corresponding (current 1)	reading:X0.01
(03) 0x03	RES 4.00mA corresponding (current 1)	reading:X0.01
(04) 0x04	SAL 20.00mA corresponding (current 1)	reading:X0.01
(05) 0x05	SAL 4.00mA corresponding (current 1)	reading:X0.01
(06) 0x06	TDS1 20.00mA corresponding (current 1)	reading:X1
(07) 0x07	TDS2 20.00mA corresponding (current 1)	reading:X1
(08) 0x08	TDS1 4.00mA corresponding (current 1)	reading:X1
(09) 0x09	TDS2 4.00mA corresponding (current 1)	reading:X1
(10) 0x0A	Temp. 20.00mA corresponding (current 2)	reading:X 0.1
(11) 0x0B	Temp. 4.00mA corresponding (current 2)	reading:X 0.1
(12) 0x0C	Current 1 offset	reading:X0.01
(13) 0x0D	Current 2 offset	reading:X0.01
(14) 0x0E	Current 1 filter	reading:X1
(15) 0x0F	Current 2 filter	reading:X1
(16) 0x10	Current 1 fixed current	reading:X0.01
(17) 0x11	Current 2 fixed current	reading:X0.01
(18) 0x12	Current 1 HOLD type	reading:X1 0=fixed,1=last
(19) 0x13	Current 2 HOLD type	reading:X1 0=fixed,1=last
(20) 0x14	Relay 1 EC close S.P.	reading:X0.01/0.1/1

(21) 0x15	Relay 1 EC open S.P.		reading:X0.01/0.1/1
(22) 0x16	Relay 1 RES close S.P.		reading:X0.01
(23) 0x17	Relay 1 RES open S.P.		reading:X0.01
(24) 0x18	Relay 1 SAL close S.P.		reading:X0.01
(25) 0x19	Relay 1 SAL open S.P.		reading:X0.01
(26) 0x1A	Relay 1 TDS1 close S.P.		reading:X1
(27) 0x1B	Relay 1 TDS2 close S.P.		reading:X1
(28) 0x1C	Relay 1 TDS1 open S.P.		reading:X1
(29) 0x1D	Relay 1 TDS2 open S.P.		reading:X1
(30) 0x1E	Relay 1 delay time		reading:X1
(31) 0x1F	Relay 2 EC close S.P.		reading:X0.01/0.1/1
(32) 0x20	Relay 2 EC open S.P.		reading:X0.01/0.1/1
(33) 0x21	Relay 2 RES close S.P.		reading:X0.01
(34) 0x22	Relay 2 RES open S.P.		reading:X0.01
(35) 0x23	Relay 2 SAL close S.P.		reading:X0.01
(36) 0x24	Relay 2 SAL open S.P.		reading:X0.01
(37) 0x25	Relay 2 TDS1 close S.P.		reading:X1
(38) 0x26	Relay 2 TDS2 close S.P.		reading:X1
(39) 0x27	Relay 2 TDS1 open S.P.		reading:X1
(40) 0x28	Relay 2 TDS2 open S.P.		reading:X1
(41) 0x29	Relay 2 delay time		reading:X1
(42) 0x2A	Relay 3 period time		reading:X0.1
(43) 0x2B	Relay 3 clean time		reading:X1
(44) 0x2C	Relay 3 delay time		reading:X1
(45) 0x2D	Relay 3 function	reading:X1	0=Rinse,1=Interval alarm, 2=Error alarm
(46) 0x2E	Record save time		reading:X1
(47) 0x2F	EC Offset		reading:X0.01/0.1/1
(48) 0x30	RES Offset		reading:X0.01
(49) 0x31	SAL Offset		reading:X0.01
(50) 0x32	TDS Offset		reading:X1
(51) 0x33	Temp. offset		reading:X0.1
(52) 0x34	Language	reading:X1	0=English ,1=Traditional Chinese, 2=Simplified Chinese
(53) 0x35	Filter		reading:X1
(54) 0x36	Temperature coefficient	reading:X0.01	0.01%-40.00%
(55) 0x37	Reference temperature	reading:X0.1	15.0-35.0℃
(56) 0x38	Mode	reading:	0=EC,1=RES,2=SAL,3=TDS
(57) 0x39	Temp. probe	reading:	0=PT1000,1=NTC30K

Chapter 15: Warranty

The product has a year warranty period from the date of the purchase, but does not include the damage which caused by improper using, disassembling and repairing the product. As long as the damage is caused by improper use of non-human within the warranty period, please prepaid freight, return it with a good packing to avoid damaging during transport, we will repair it for you free of charge. We will analyze the reasons for the damage of the product, if the damage exceeds the warranty conditions, we need to charge the repair fee.



Shanghai Lanchang Automation Technology Co., Ltd



✉ trade@lclanchang.com

📍 Building 8 ,No. 4361,Hutai Road,Baoshan District,Shanghai,China